



Usage of Internal Grip Lock



1>> Fix the buckle part — Pay attention to its distance from the drawer ceiling edge. It is about 2 cm.

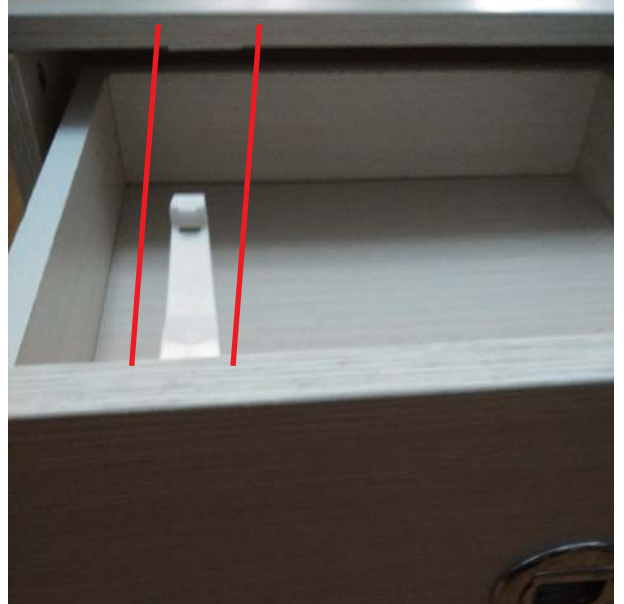

2>> Fix the Lock part — Lock part & Buckle part should be fixed on the same straight line.

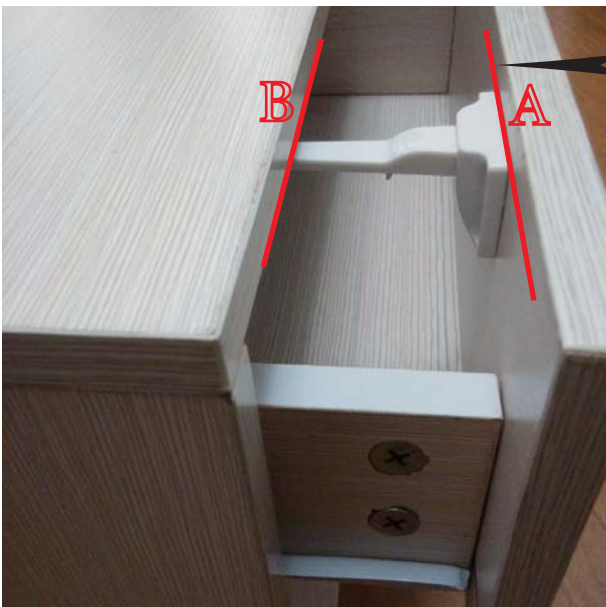

3>> Attention: The line A should be on the same horizontal line with Line B. That is to say: the upper edge of the lock part should be fixed on the same level with the drawer ceiling.

If users fix the latch according to the above instructions, the two parts should be at the same horizontal direction or vertical direction when they are fixed. It can make the Latch endure more strength.